

User's Guide

PageSaver™ Voice Mail System



2416 Broadway, Eureka, CA 95501
707-445-9665 * 800-704-PAGE

Paging with Voicemail

By combining our voice mail system with your pager, you've got a personal answering machine that will notify your pager when you have a message in your mailbox.

Your caller has the option of paging you with a conventional numeric page, or of leaving you a voice message.

By setting your mailbox to NOTIFY MODE, your pager will alert you when you receive a new voicemail message.

NOTE: In order for your callers to page you while your mailbox is in Notify Mode, instruct them in your prerecorded greeting to dial their number during the greeting.

Example: "Hi, this is Bill. If you'd like to page me, dial your number now. If you'd like to leave a voice message, just start recording after the tone."

To program your mailbox for NOTIFY MODE, follow these easy steps:

FOR NOTIFY MODE:

1. Dial your pager number.
2. During the greeting voiceprompt, press.
3. Enter your passcode.
4. At the main menu, press to select the notify mode.

TO RETRIEVE YOUR MESSAGES:

1. Dial your pager number.
2. During the greeting voice prompt, press.
3. Enter your passcode.
4. Press to select the Retrieval Menu.
5. After listening to your message, press:
 - to erase and play the next message;
 - to keep the message and play the next;
 - to replay the message;
 - to return to the Main Menu;
 - to hang up;

TO RECORD YOUR MAILBOX GREETING:

1. Dial your pager number.
 2. During the greeting voice prompt, press.
 3. Enter your passcode.
 4. Press to select the Greeting Menu.
 5. During the greeting menu press and wait for the tone.
Then record your greeting.
 6. To review your greeting press for playback.
 7. To erase your greeting press .
- To re-record your greeting refer to step 5.

Typical Pager Display

*Number of voice
mail messages.*

*Hours since first
message was received.*

PageSaver

PageSaver plays back the last 15 numeric pages you received in the past 72 hours.

To access PageSaver, follow these easy steps:

TO ACCESS PAGESAVER

1. Dial your pager number.
2. During the greeting voiceprompt, press.
3. Enter your passcode.
4. Select from the Main Menu.

MAIN MENU

- Retrieval Menu
- Paging Mode
- Insurance Mode
- Mailbox Mode
- Notify Mode
- Announcement Mode
- Verify Current Mode
- Greeting Menu
- Help
- Terminate Call

RETRIEVAL MENU

After each message plays, press:

- to erase message and play next
- to keep message and play next
- to repeat last message
- for time and date of last message
- to terminate call
- for Main Menu

GREETING MENU

Paging/Insure Greeting:

- to record to play to erase

Mailbox/Notify Greeting:

- to record to play to erase

Announcement:

- to record to play to erase

- For help
- to terminate call
- for Main Menu



2416 Broadway, Eureka, CA 95501
707-445-9665 * 800-704-PAGE